

# CombiGuard™


## Low Cost Planting Solution

### Installation Guide



#### Step 1

Plant your seedling.

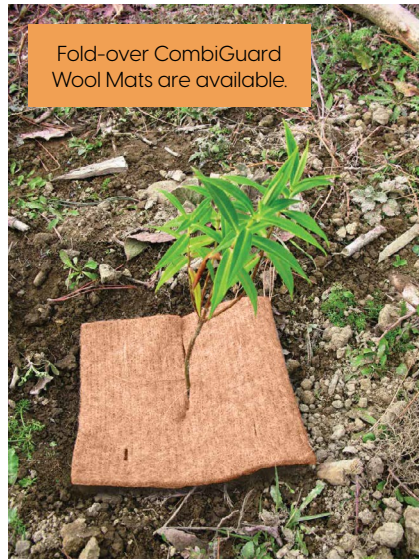

#### Step 2

Position the coir mat around the stem with the stem centered in the mat.



#### Step 3

Firmly push the first 3 canes through the holes into the soil approximately 20cm. Splay the canes outwards slightly.



#### Step 4

Slide the CombiGuard sleeve over the first 3 canes and seedling.



#### Step 5

Insert the 4th cane into the sleeve, pushing through the remaining hole and at the same time tensioning the guard.



#### Step 6

View from the top of the installed CombiGuard.

For further info or questions contact our friendly team

**0800 600 789**

[sales@advancelandscape.co.nz](mailto:sales@advancelandscape.co.nz)

[www.advancelandscape.co.nz](http://www.advancelandscape.co.nz)

**Advance**  
Landscape Systems  
*Green your world™*