


# Pond Liner


## Designed for Lining Ponds and Dams

### Installation Guide for Liners Under 100m<sup>2</sup>

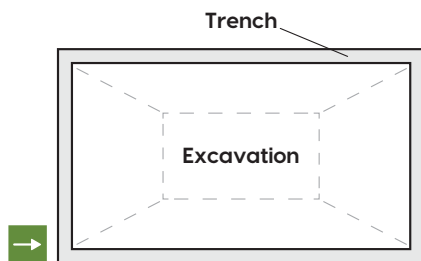


#### Step 1

Place the folded liner at the bottom right corner of the short edge of the excavation with the packaging arrows facing the direction the liner will be unfolded.

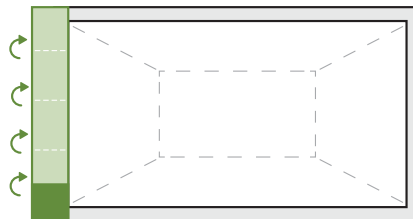


#### Step 2

Unfold the liner along the short edge of the excavation as per the diagram.

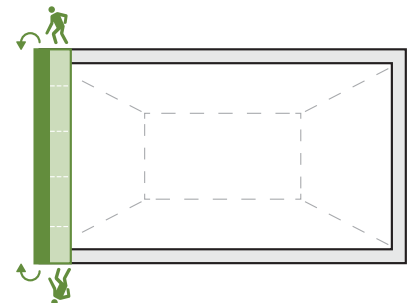


#### Step 3

This will expose a section 'flap'. Unfold this section away from the starting point so it covers the trench on the short edge.

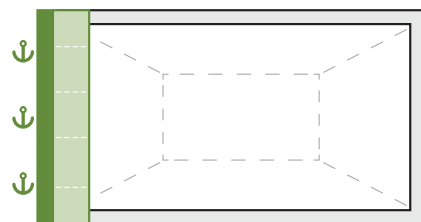


#### Step 4

Anchor the 'flap' over the trench. This can be done by standing on it, or placing heavy objects. This step allows the rest of the liner to be unfolded without falling into the excavation.

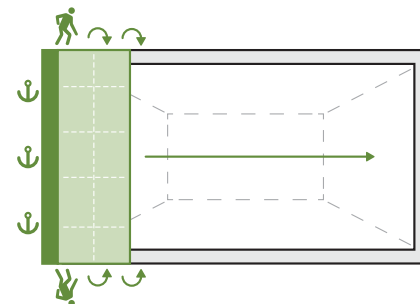


#### Step 5

With one person on each side of the long edges of the excavation, evenly fold / roll out the liner towards the opposite short edge. Once the liner is completely unfolded, ensure it is placed evenly over the excavation.

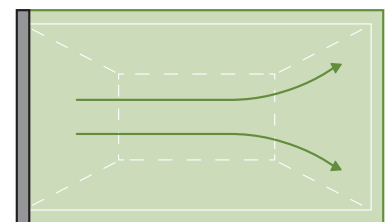

#### Step 6

Let the liner settle into the excavation. The liner may need to be adjusted to fit evenly. Backfill the short edge of the trench, then chase out any large folds to the corners of the excavation (not always possible).

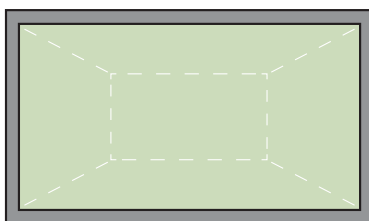

#### Step 7

Backfill all trenches lightly. Sufficient enough to hold the liner in place, while also allowing the liner to move when getting filled with water. After backfilling the trenches, the excavation is ready to be filled with water. Once filled, other necessary groundwork and landscaping can be completed.

Note: Do not trim any of the edges of the liner until after the pond has been completely filled with water as additional movement of the liner may occur.

For further info or questions contact our friendly team

0800 600 789

sales@advancelandscape.co.nz  
www.advancelandscape.co.nz

**Advance**  
Landscape Systems  
*Green your world™*