

FiberGuard 2.0

100% Biodegradable Seedling Guard Kit or Combo


FiberGuard 2.0 Kit Includes:

- 1 FiberGuard 2.0 (300 or 450)
- 2 Bamboo stakes
- 1 Mulch Mat (either EcoWool, EcoCair or FuturFiber® Hemp)

FiberGuard 2.0 Combo Includes:


- 1 FiberGuard 2.0 (300 or 450)
- 2 Bamboo stakes

Installation Guide

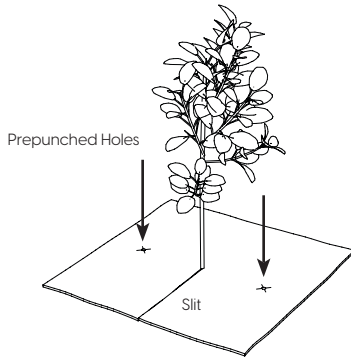


Step 1

Place the mulch mat around the plant (kit only).

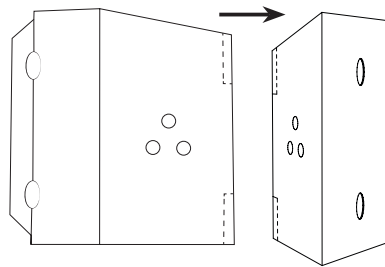


Step 2

Pop out the pre-glued guard so it forms a triangular shape. Push in the perforated slots on the leading edge of the guard.

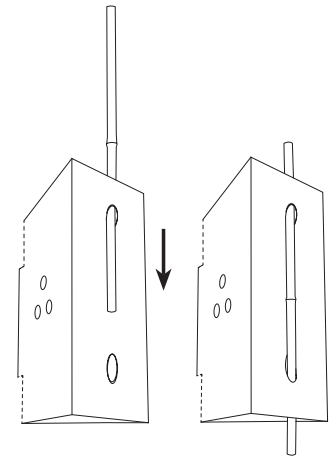


Step 3

Insert one bamboo stake into the holes down one side of the guard as shown.

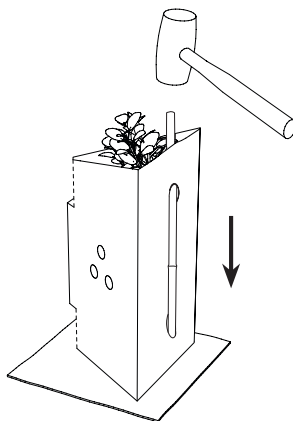


Step 4

Position the guard over the plant. Line up the inserted bamboo stake with one of the pre-punched holes in the mat. Using a rubber mallet, tap the stake into the ground.

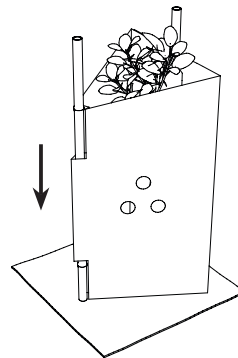

Step 5

Thread the second bamboo stake through the slots on the opposite side of the guard. Use a rubber mallet to tap the stake into the ground.

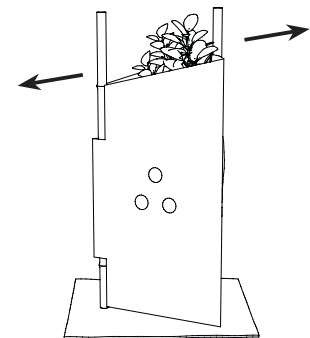

Note

In high-wind areas, face the leading edge of the guard toward the prevailing wind. Angle both bamboo stakes slightly outward during installation to increase tension and stability.

For further info or questions contact our friendly team

0800 600 789

sales@advancelandscape.co.nz
www.advancelandscape.co.nz

Advance
 Landscape Systems
Green your world™